

## 6.8 Call Forward

Call forward is also known as 'Call Divert' which is to divert the incoming call to a specific number based on the conditions and configurations. User can configure the call forward settings of each line.

There are three types,

- **Unconditional Call Forward** – Forward any incoming call to the configured number.
- **Call Forward on Busy** – When user is busy, the incoming call will be forwarded to the configured number.
- **Call Forward on No Answer** – When user does not answer the incoming call after the configured delay time, the incoming call will be forwarded to the configured number.

To configure call forward, when the device is in the default standby mode,

- Press soft-button [More] till you find the [Call Forward] button.
- Press [Call Forward] button to open call forward configuration screen, select the line to be configured with up/down navigator keys.
- Press [Edit] button to edit the call forward settings.
- Select the call forward type with up/down navigator keys. Click [Edit] button to configure the call forward number and delay, if applicable.
- Browse the setting parameters with up/down navigator keys and enter required information

When done, press  [OK] button to save the changes.

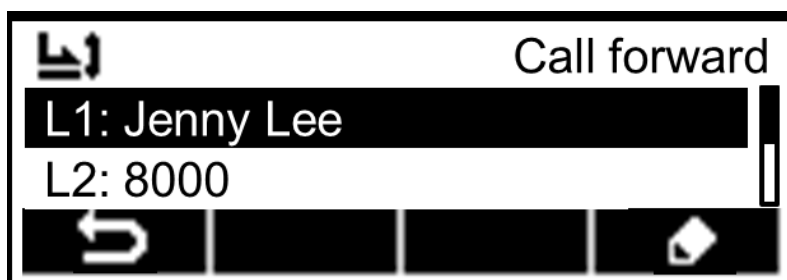


Figure 69 - Select Line for Call Forward Configuration



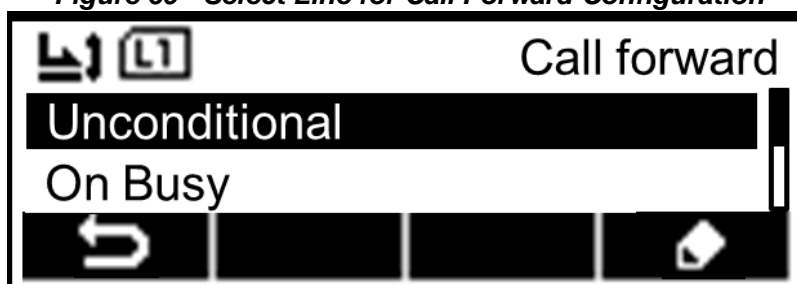



Figure 70 - Select Call Forward Type

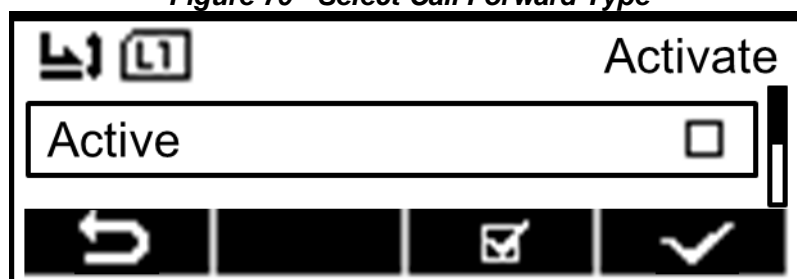

**Figure 71 - Activate Call Forward**

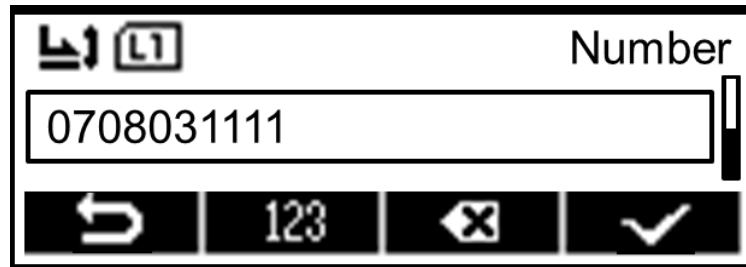

**Figure 72 - Configure Call Forward Number**

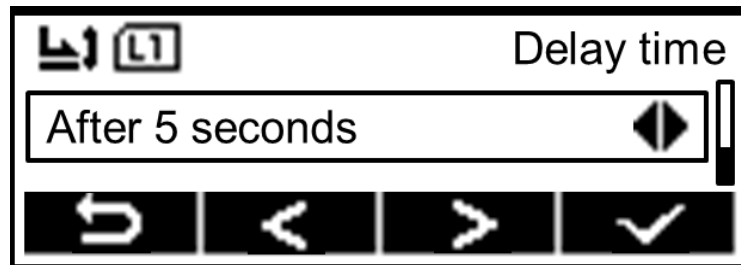

**Figure 73 - Set Delay Time for Call Forward on No Answer**

When done, press [OK] button to save the changes.

בהצלחה!!!

צור יועצים ותקשורת בע"מ  
מחלקת תמיכה ושירות